

The following catalog
has gaps in its page
numbers, or doesn't
have any numbers.
We have chosen to
leave the page
numbering in the
order that Acrobat
assigns it.



PARTS CATALOG

15DGAB/51922F

Generating Set

NAVIERAS/PRMMI

SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of the equipment and replacement of parts. Please read and observe.



This symbol warns of immediate hazards which will result in severe personal injury or death.



This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO., and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below:

MODEL AND SPEC NO. _____

SERIAL NO. _____

PRODUCT SAFETY PRECAUTIONS



Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.



Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!



Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives, or using solvents take all necessary precautions not to ingest, breathe the fumes, or contact the liquids. Use adequate ventilation and wear protective gloves, masks and clothing!

This catalog applies to the 15DGAB/51922F Generator Set as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description. Throughout this catalog left and right sides are determined by facing the air inlet guard of the housing or engine end (front) of the set.

Engine parts that have been modified or added by Onan are identified in this catalog. All other engine replacement parts must be ordered from the engine manufacturer by referring to the engine manufacturer's nameplate and supplying all available information. Contact your nearest engine parts dealer for assistance in ordering replacement parts.

Replacement Engine

	<u>Onan</u> <u>Part Number</u>	<u>Cummins</u> <u>Model</u>
15DGAB/51922F	*100-3087	A423D-1/50344E

* Replacement engines cannot be ordered from Onan. Order from your nearest Cummins distributor and reference the above Onan part number.

 
Generator Set Data Table

MODEL AND SPECIFICATION	ELECTRICAL DATA					BATTERY VOLTAGE
	WATTS	VOLTS	HERTZ	WIRE	PHASE	
15DGAB/51922F	15,000	230	60	12	3	12 VDC

Index

Adapter, Boot	19
Adapter, Boot	20
Alternator	8
Baffle Assy, Air	17
Baffle, Radiator	11
Battery	5
Bearing, Ball	17
Belt	6
Block, Terminal - 3 Term (TB1)	19
Block, Terminal - 3 Term (TB1)	20
Boot, Breaker - Circuit	19
Boot, Breaker - Circuit	20
Boot, Button - Push	19
Boot, Button - Push	20
Boot, Switch - Toggle	19
Boot, Switch - Toggle	20
Box, Control	19
Box, Control	20
Bracket, Exhaust	8
Bracket, Filter - Fuel	5
Breaker, Circuit - 10A (CB1)	19
Breaker, Circuit - 50A (CB2)	19
Breaker, Circuit - 10A (CB1)	20
Breaker, Circuit - 50A (CB2)	20
Bridge, Rectifier (CR2)	19
Bridge, Rectifier (CR2)	20
Cable, Battery - Positive	5
Cable, Battery - Negative	5
Cap, Radiator	11
Cleaner, Air	7
Cock, Drain	11
Cock, Drain	5
Cover, Inlet	17
Decal, "Diesel Fuel Only"	21
Decal, "Glow Plug Preheat"	21
Decal, "Navieras"	15
Decal, "230VAC 60HZ 3 Phase"	21
Decal, Box - Control Bottom	19
Decal, Box - Control Back	19
Decal, Box - Control Bottom	20
Decal, Box - Control Back	20
Decal, Caution	21
Decal, Diagram - Wiring	15
Decal, Face - Control Front	19
Decal, Face - Control Rear	19
Decal, Face - Control Front	20
Decal, Face - Control Rear	20
Decal, Latch	15
Decal, Logo - "ONAN"	15
Decal, Mounting	21
Decal, Oil	15
Decal, Operating	15
Decal, Service	15
Disc, Drive	17
Door, Housing	15
Endbell	17
Fan, Alternator	6
Fan, Gen	17
Fan, Radiator	11
Frame	13
Gasket, Door - Control	19
Gasket, Door - Control	20
Gasket, Outlet - Exhaust	8
Gauge, Pressure - Oil (M11)	19
Gauge, Pressure - Oil (M11)	20
Gauge, Temp - Coolant (M12)	19
Gauge, Temp - Coolant (M12)	20
Guard Assy, Fan - Lower	17
Guard Assy, Fan - Upper	17
Harness, Receptacle	19
Harness, Receptacle	20
Harness, Wiring - Engine	19
Harness, Wiring - Engine	20
Hinge, Housing	15
Hold-Down, Battery	5
Holder, Door	15
Hood, Inlet - Air	7
Housing, End	15
Insulator, Tank - Fuel	9
Insulator, Vibration	13
Label, Caution	21
Label, Danger	21
Label, Number - Serial	21
Label, Warning	11
Label, Warning	21
Latch, Housing	15
Material, Laminate	21
Meter, Amps - DC (M13)	19
Meter, Amps - DC (M13)	20
Meter, Totalizing - Time (M14)	19
Meter, Totalizing - Time (M14)	20
Muffler	8
Pad, Mounting - Tank	9
Panel, Housing	15
Panel, Housing	17
Pin, Spring	13
Pulley, Alternator	6
Radiator (Includes Cap)	11
Receptacle, 230V 50A (J1)	19
Receptacle, 230V 50A (J1)	20
Relay, Pilot - Starter (K3)	19
Relay, Pilot - Starter (K3)	20
Relay, Solenoid (K2)	19
Relay, Solenoid (K2)	20
Rod, Battery	5
Rotor Assy, Generator	17
Rotor, Exciter - Generator	17
Sender, Pressure - Oil	5
Sender, Temperature - Water	5
Seperator, Fuel/Water	5
Socket, Relay	19
Socket, Relay	20
Spacer	13
Spacer, Bracket - Alternator	6
Spacer, Bracket - Alternator	17
Spacer, Fan	11
Spacer, Mount - Engine	13
Spacer, Overflow - Bottom	9
Spacer, Overflow - Bottom	11
Stator Assy, Generator	17
Stator, Exciter - Generator	17
Strap, Tank - Fuel	9
Support, Radiator - Right	11
Support, Radiator - Left	11
Suppressor Assy (RV1)	19
Suppressor Assy (RV1)	20
Switch, Off/On/Start (S11)	19
Switch, Off/On/Start (S11)	20
Switch, Preheat/Bypass (S12)	19
Switch, Preheat/Bypass (S12)	20
Switch, Pressure	5
Tag, Warning	21
Tank, Fuel	9
Tank, Recovery - Coolant	11
Thermostat	5
Top, Housing - Front	15
Top, Housing - Rear	15
Transformer (T1)	19
Transformer (T1)	20
Tube, Air	7
Tube, Cleaner - Air	7
Tube, Exhaust	8


Engine Accessories

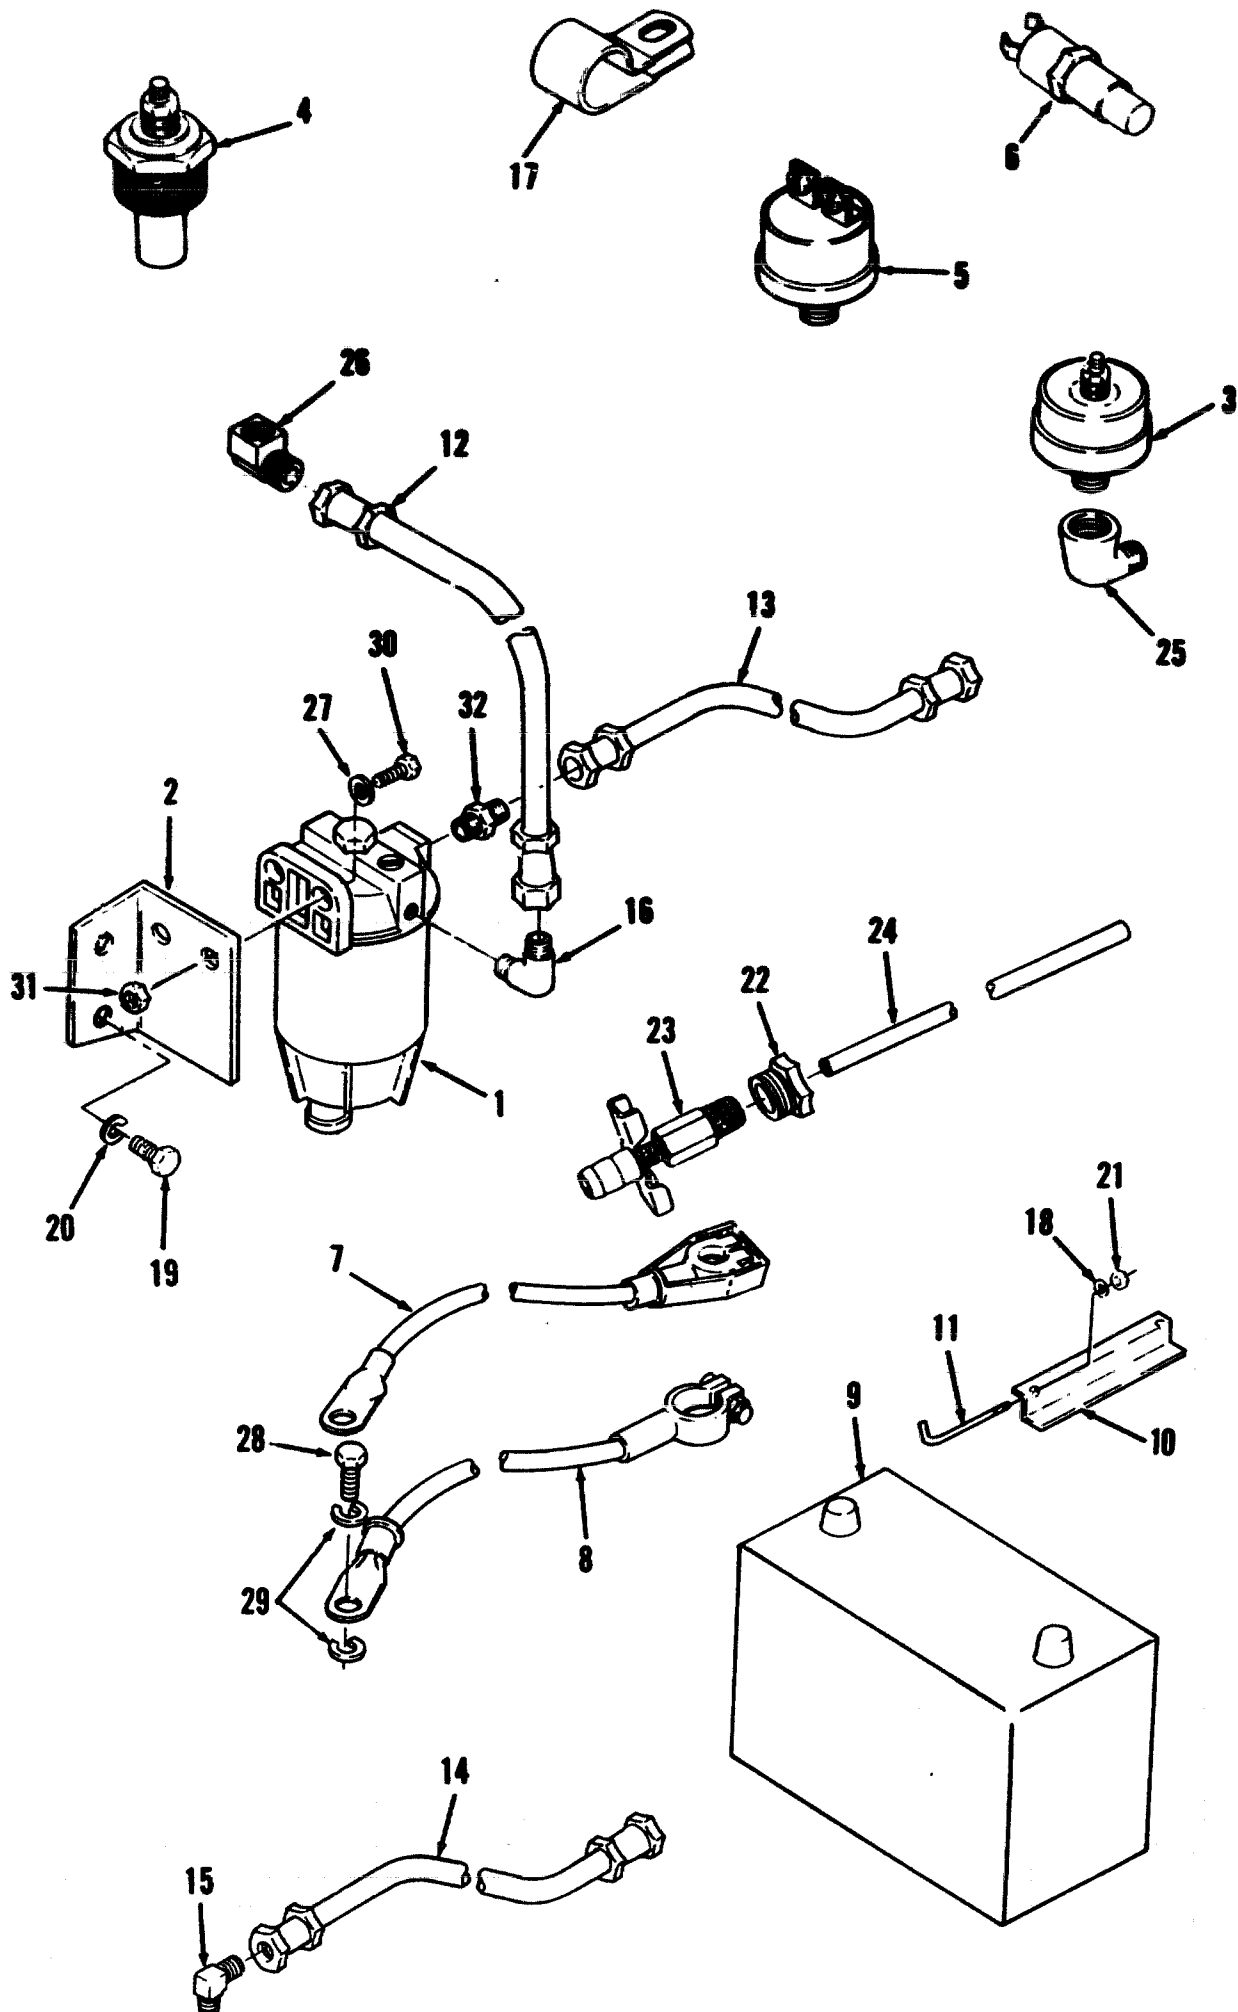

Engine Accessories

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	149-1908-01	1	Seperator, Fuel/Water (Includes Element)	17	518-0625	4	Clamp, Loop
	149-1914-01		Element, Fuel/Water	18	526-0386	2	Washer, Flat (1/4")
2	149-2349-02	1	Bracket, Filter - Fuel	19	800-3016	2	Screw, Cap - Hex Head (M12 x 20mm)
3	193-0244	1	Sender, Pressure - Oil	20	856-0013	2	Washer, Lock - EIT (1/2")
4	193-0318	1	Sender, Temperature - Water	21	870-0498	2	Nut, Lock - Nylon
5	309-0561-02	1	Switch, Pressure	22	502-0029	1	Bushing, Pipe
6	309-0628	1	Thermostat	23	502-1103	1	Cock, Drain
7	416-0919	1	Cable, Battery - Positive	24	503-0276	1	Hose 1.3'
8	416-0979	1	Cable, Battery - Negative	25	505-0049-01	1	Elbow, Street
9	416-0980	1	Battery	26	502-1118	1	Elbow, Flare - Inverted
10	416-0981	1	Hold-Down, Battery	27	526-0191	2	Washer, Flat (5/16")
11	416-0982	2	Rod, Battery	28	800-2057	1	Screw, Cap - Hex Head (M8 x 20mm)
12	501-0605	1	Hose	29	856-1008	2	Washer, Lock - EIT (5/16")
13	501-0606	1	Hose	30	800-0730	2	Screw, Cap - Hex Head Cree
14	501-0607	1	Hose	31	870-0500	2	Nut, Lock (5/16")
15	502-1043-02	1	Elbow, Adapter - Male (1/8)	32	502-1045-12	1	Connector, Male
16	502-1043-03	1	Elbow, Adapter - Male (1/4)				

 Alternator

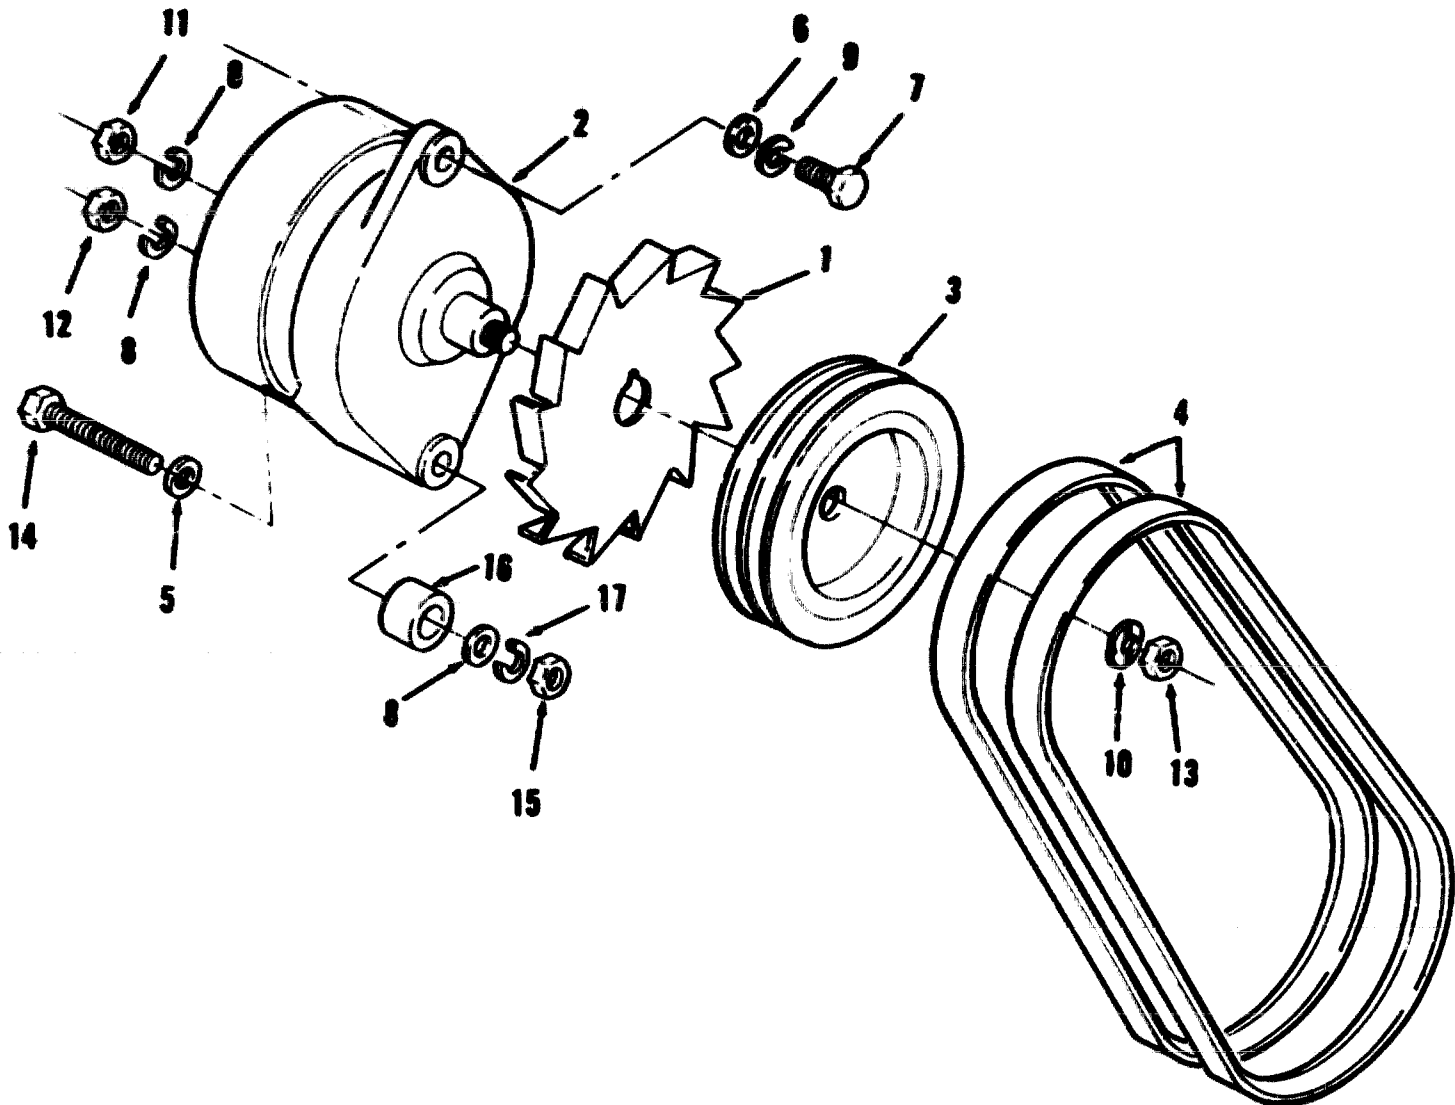


1058B

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1981	1	Fan, Alternator
2	191-1983-01	1	Alternator
3	191-2035	1	Pulley, Alternator
4	511-0147-14	2	Belt
5	526-1516	1	Washer, Flat
6	526-2106	1	Washer, Flat (M8)
7	800-3014	1	Screw, Cap - Hex Head (M8 x 30mm)
8	850-2005	2	Washer, Lock (M5)
9	850-2008	2	Washer, Lock (M8)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
10	851-0039	1	Washer, Spring (M16)
11	860-2006	3	Nut, HEX (M5)
12	860-2008	1	Nut, HMS (M8)
13	870-2161	1	Nut, HEX (M16)
14	800-6100	1	Screw, Cap - Hex Head (M10 x 100mm)
15	860-2059	1	Nut, Hex (M10)
16	191-1321	1	Spacer, Bracket - Alternator
17	850-2010	1	Washer, Lock (M10)

 
Air Cleaner

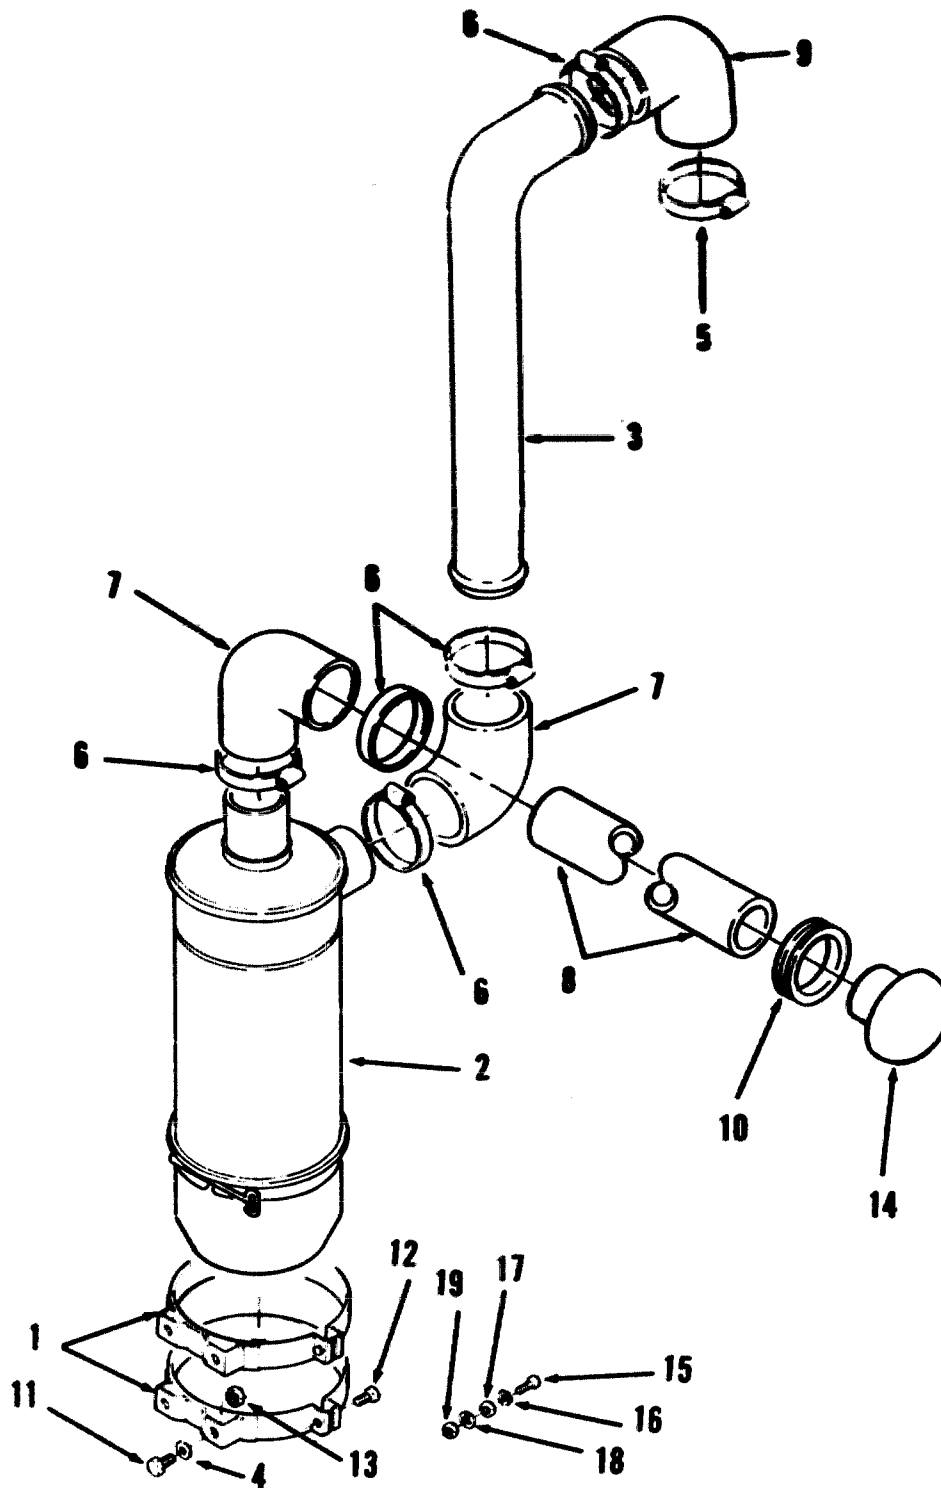

1057B

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140-0519	2	Clamp, Cleaner - Air	11	800-0711	3	Screw, Cap - Hex Head Cres
2	140-2703	1	Cleaner, Air	12	812-0331	2	Screw, Round Head - Slotted
3	140-2705	1	Tube, Cleaner - Air	13	870-0498	5	Nut, Lock - Nylon
4	405-4557	3	Washer, Composite	14	140-1559	1	Hood, Inlet - Air
5	503-0354	1	Clamp, Hose	15	800-0712	1	Screw - HH Cres
6	503-0365	6	Clamp, Hose	16	856-0006	1	Washer - EIT Lock
7	503-0419	2	Elbow, Rubber - Molded	17	870-0212	1	Nut - Self Locking
8	140-2709-02	1	Tube, Air	18	854-0014	1	Washer IT Lock
9	503-1834	1	Elbow, Cleaner - Air	19	870-0065	1	Nut - Self Locking
10	508-1057	1	Grommet				

 Muffler

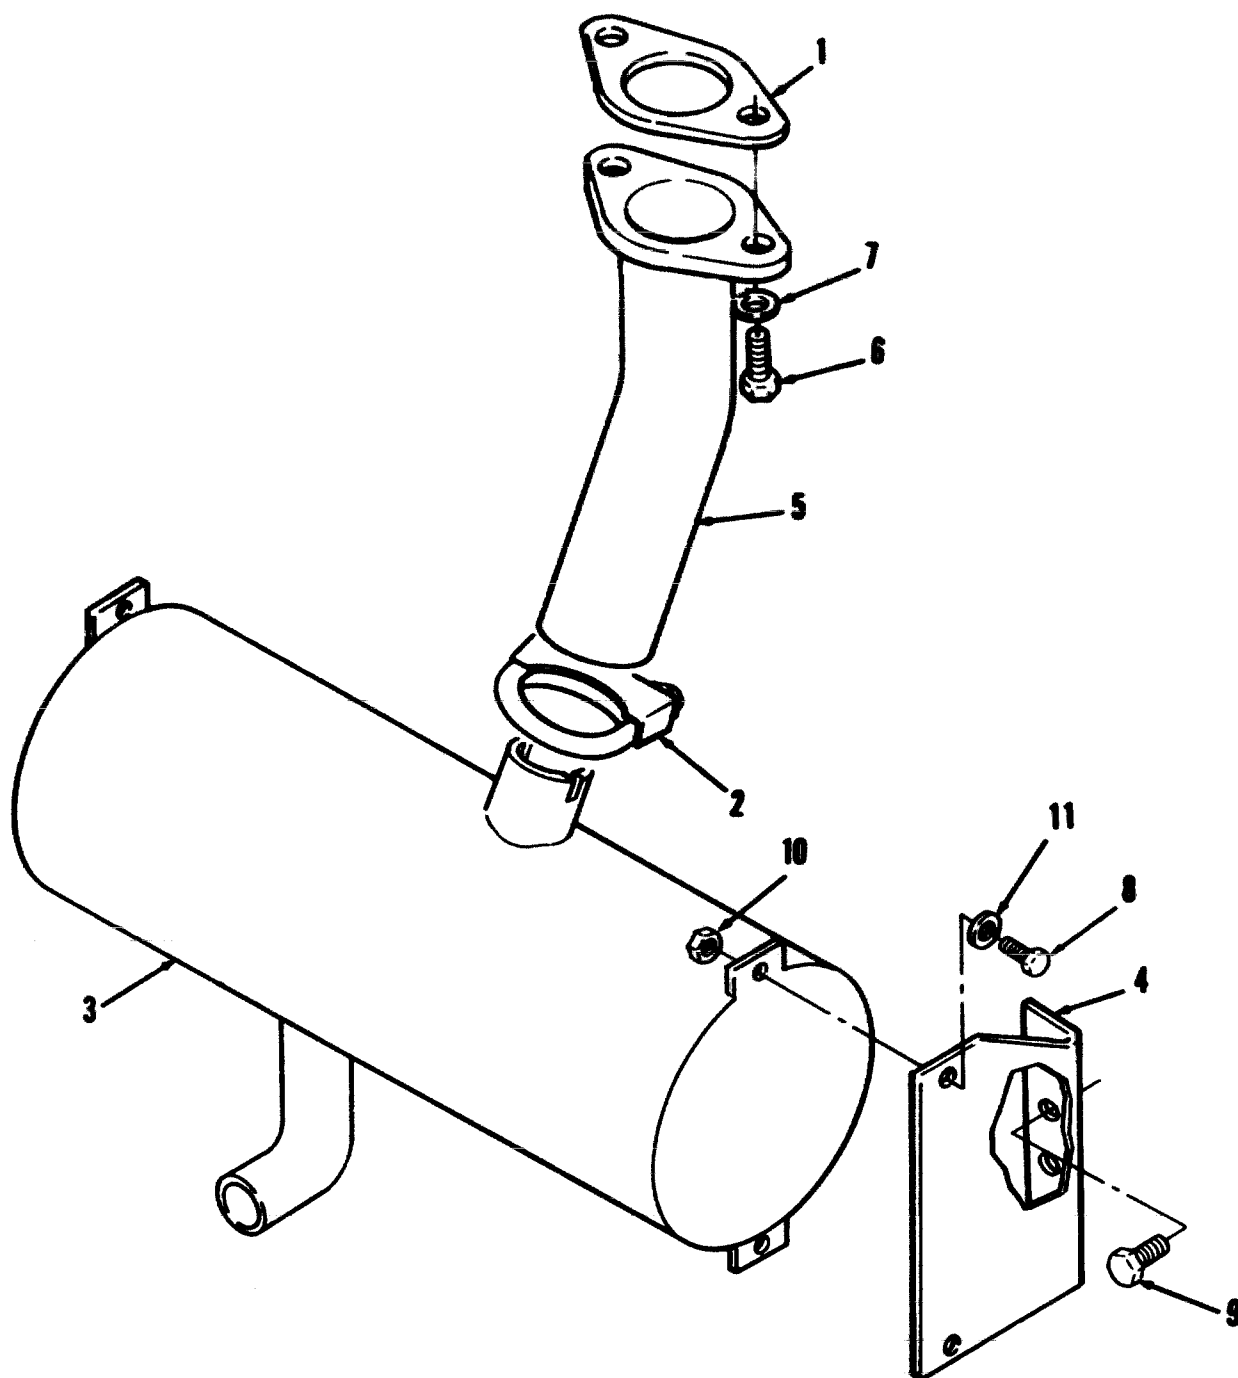


1078A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155-2515	1	Gasket, Outlet - Exhaust
2	155-2548	1	Clamp, Muffler
3	155-2632	1	Muffler
4	155-2633-02	2	Bracket, Exhaust
5	155-2634	1	Tube, Exhaust
6	718-1054	2	Screw, Cap - Hex Head (M10 x 25mm)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	740-1008	2	Washer, Flat (M10)
8	800-0728	4	Screw, Cap - Hex Head Cres
9	800-3016	3	Screw, Cap - Hex Head (M12 x 20mm)
10	870-0500	4	Nut, Lock (5/16")
11	526-0191	4	Washer - Flat

 Fuel Tank

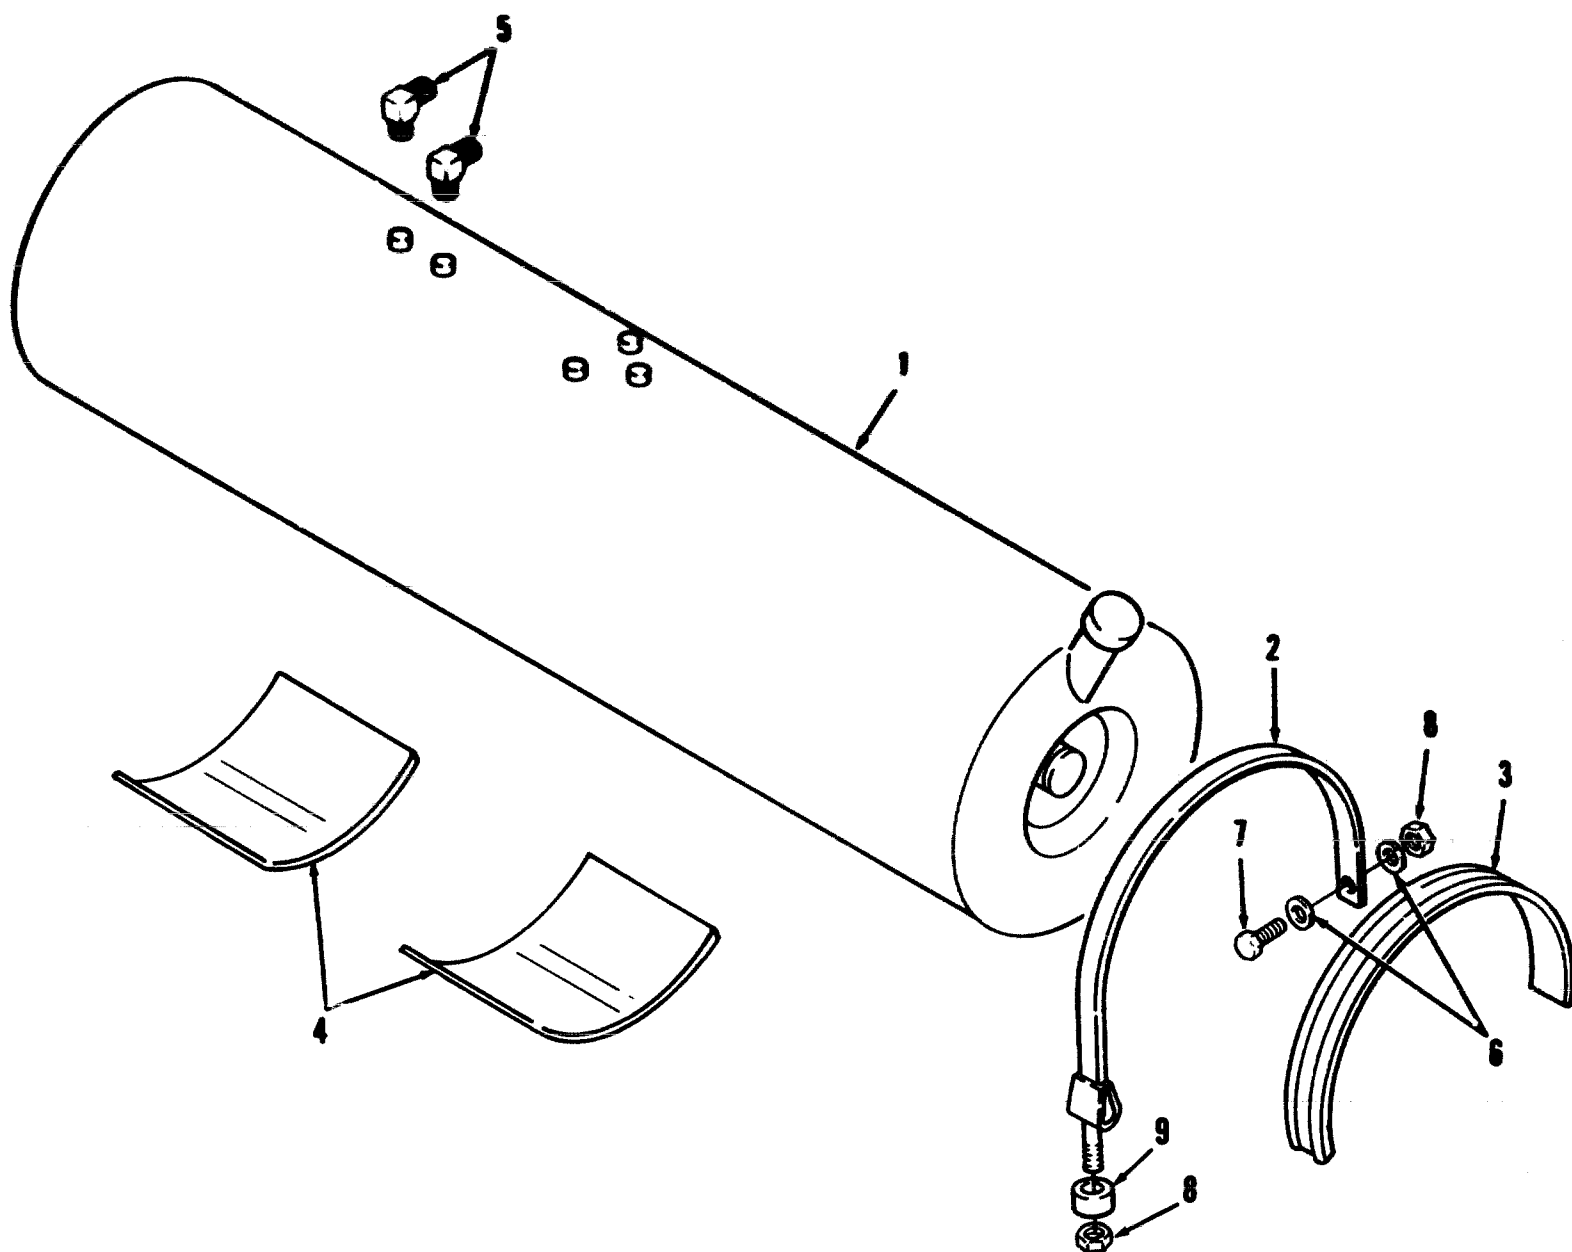


1060B

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	159-1312	1	Tank, Fuel
2	159-1313-02	2	Strap, Tank - Fuel
3	159-1314	2	Insulator, Tank - Fuel
4	159-1315	2	Pad, Mounting - Tank
5	502-1043-03	2	Elbow, Adaptor - Male

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	526-0395	4	Washer, Flat (1/2")
7	800-0743	2	Screw, Cap - Hex Head Cres
8	870-0499	4	Nut, Lock - Nylon
9	130-4044-02	2	Spacer, Overflow - Bottom

 Radiator

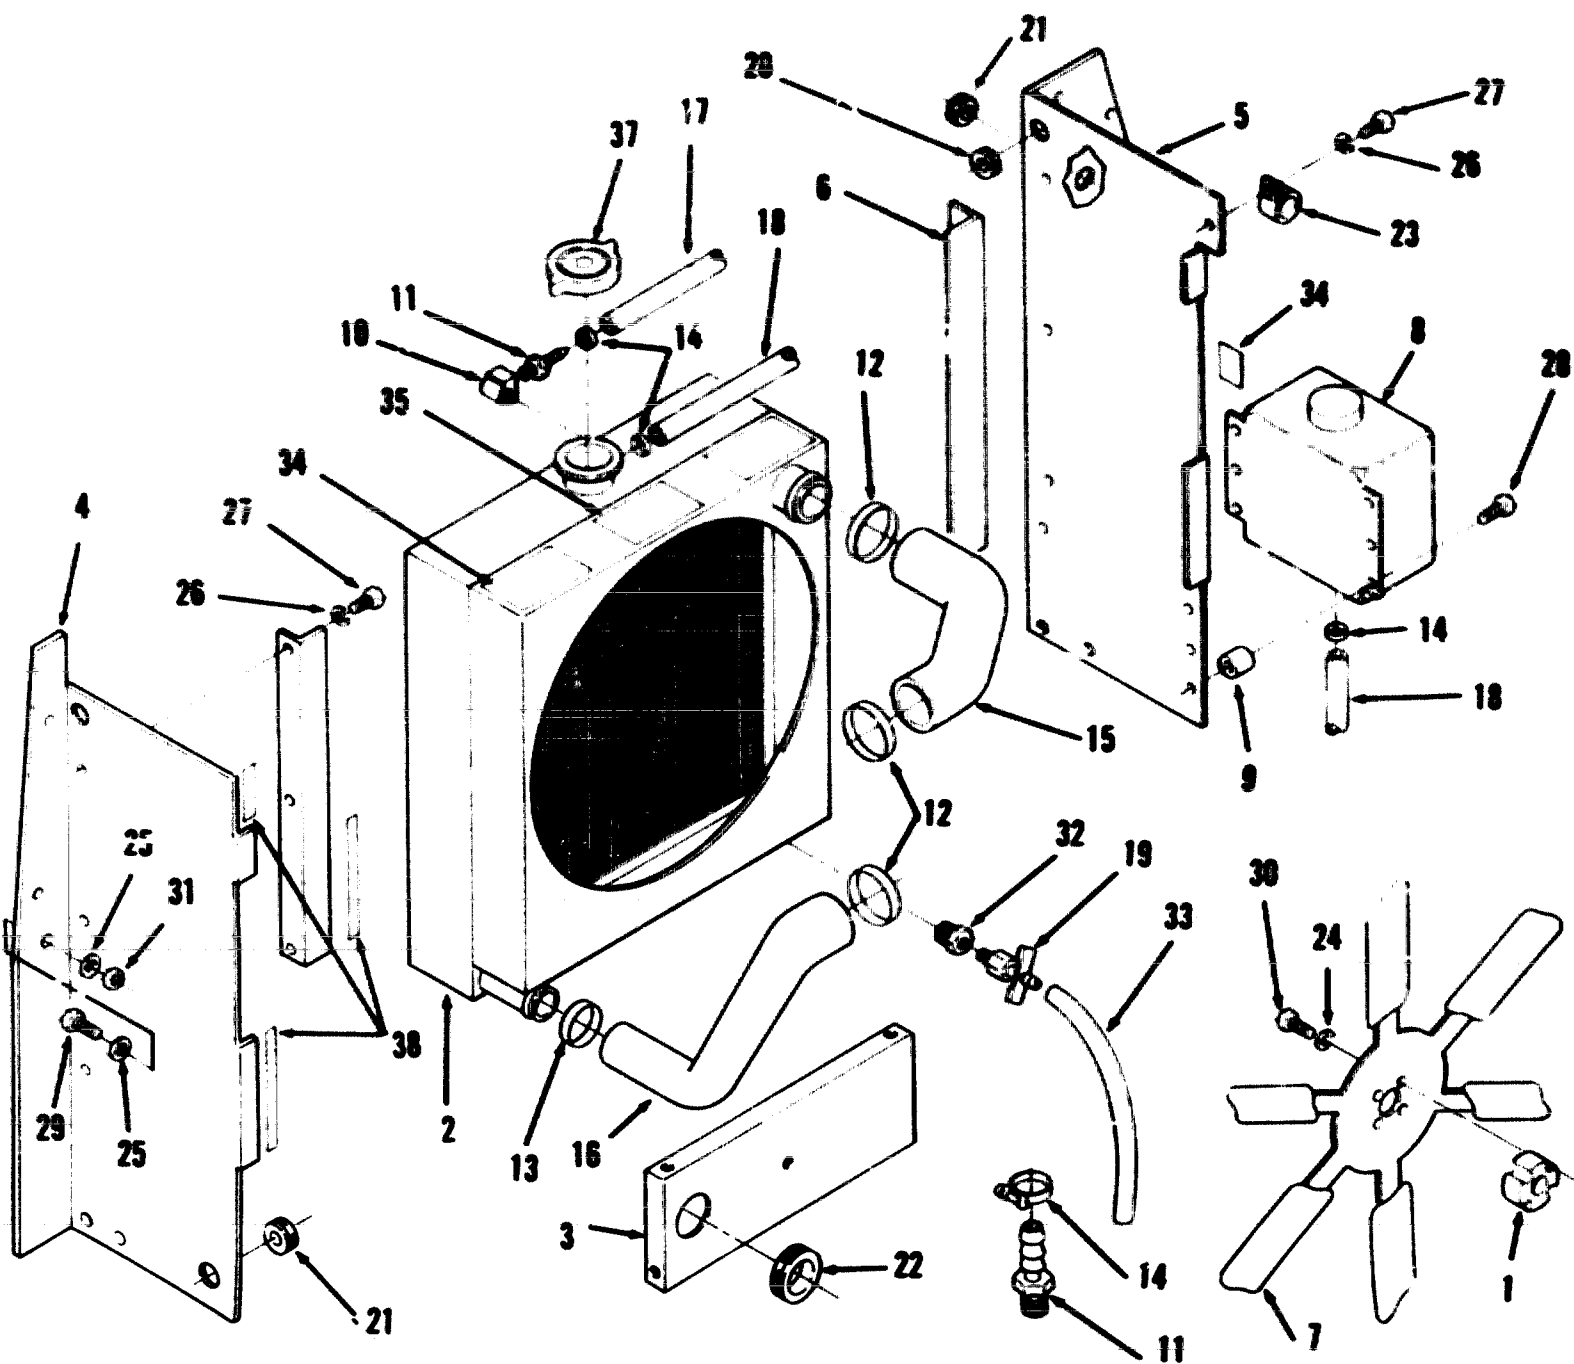


1082C

Radiator

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-1880	1	Spacer, Fan	21	508-0183	2	Grommet
2	130-4036	1	Radiator (Includes Cap)	22	508-0051	1	Grommet
3	130-4037-02	1	Baffle, Radiator	23	518-0625	5	Clamp, Loop
4	130-4038-02	1	Support, Radiator - Right	24	526-0022	4	Washer, Flat
5	130-4039-02	1	Support, Radiator - Left	25	526-0395	6	Washer, Flat
6	130-4040-02	2	Clamp, Mounting - Radiator	26	526-0396	9	Washer, Flat
7	130-4041	1	Fan, Radiator	27	800-0712	9	Screw, Cap - Hex Head Cree
8	130-4042	1	Tank, Recovery - Coolant	28	800-0717	3	Screw, Cap - Hex Head Cree
9	130-4044-02	3	Spacer, Overflow - Bottom	29	800-0743	6	Screw, Cap - Hex Head Cree
10	502-0020	1	Elbow, Pipe - Street	30	800-3015	4	Screw, Cap - Hex Head
11	502-0582	2	Connector, Hose				(M6 x 55mm)
12	503-0365	3	Clamp, Hose	31	870-0499	6	Nut, Lock - Nylon
13	503-0429	1	Clamp, Hose	32	502-0029	1	Bushing, Pipe
14	503-0685	4	Clamp, Hose	33	503-0276	1	Hose 1.3'
15	503-1827	1	Hose, Radiator - Upper	34	098-6193	3	Label, Warning
16	503-1828	1	Hose, Radiator - Lower	35	098-4730	1	Label, Warning
17	503-18J7	1	Hose, 2.5'	36	098-5822	2	Label, Warning
18	503-1837	1	Hose, 3.58'	37	130-3721	1	Cap, Radiator
19	502-1103	1	Cock, Drain	38	895-0308	1	Tape, Polyurethane (5 ft)
20	508-0060	1	Grommet				

 
Chassis

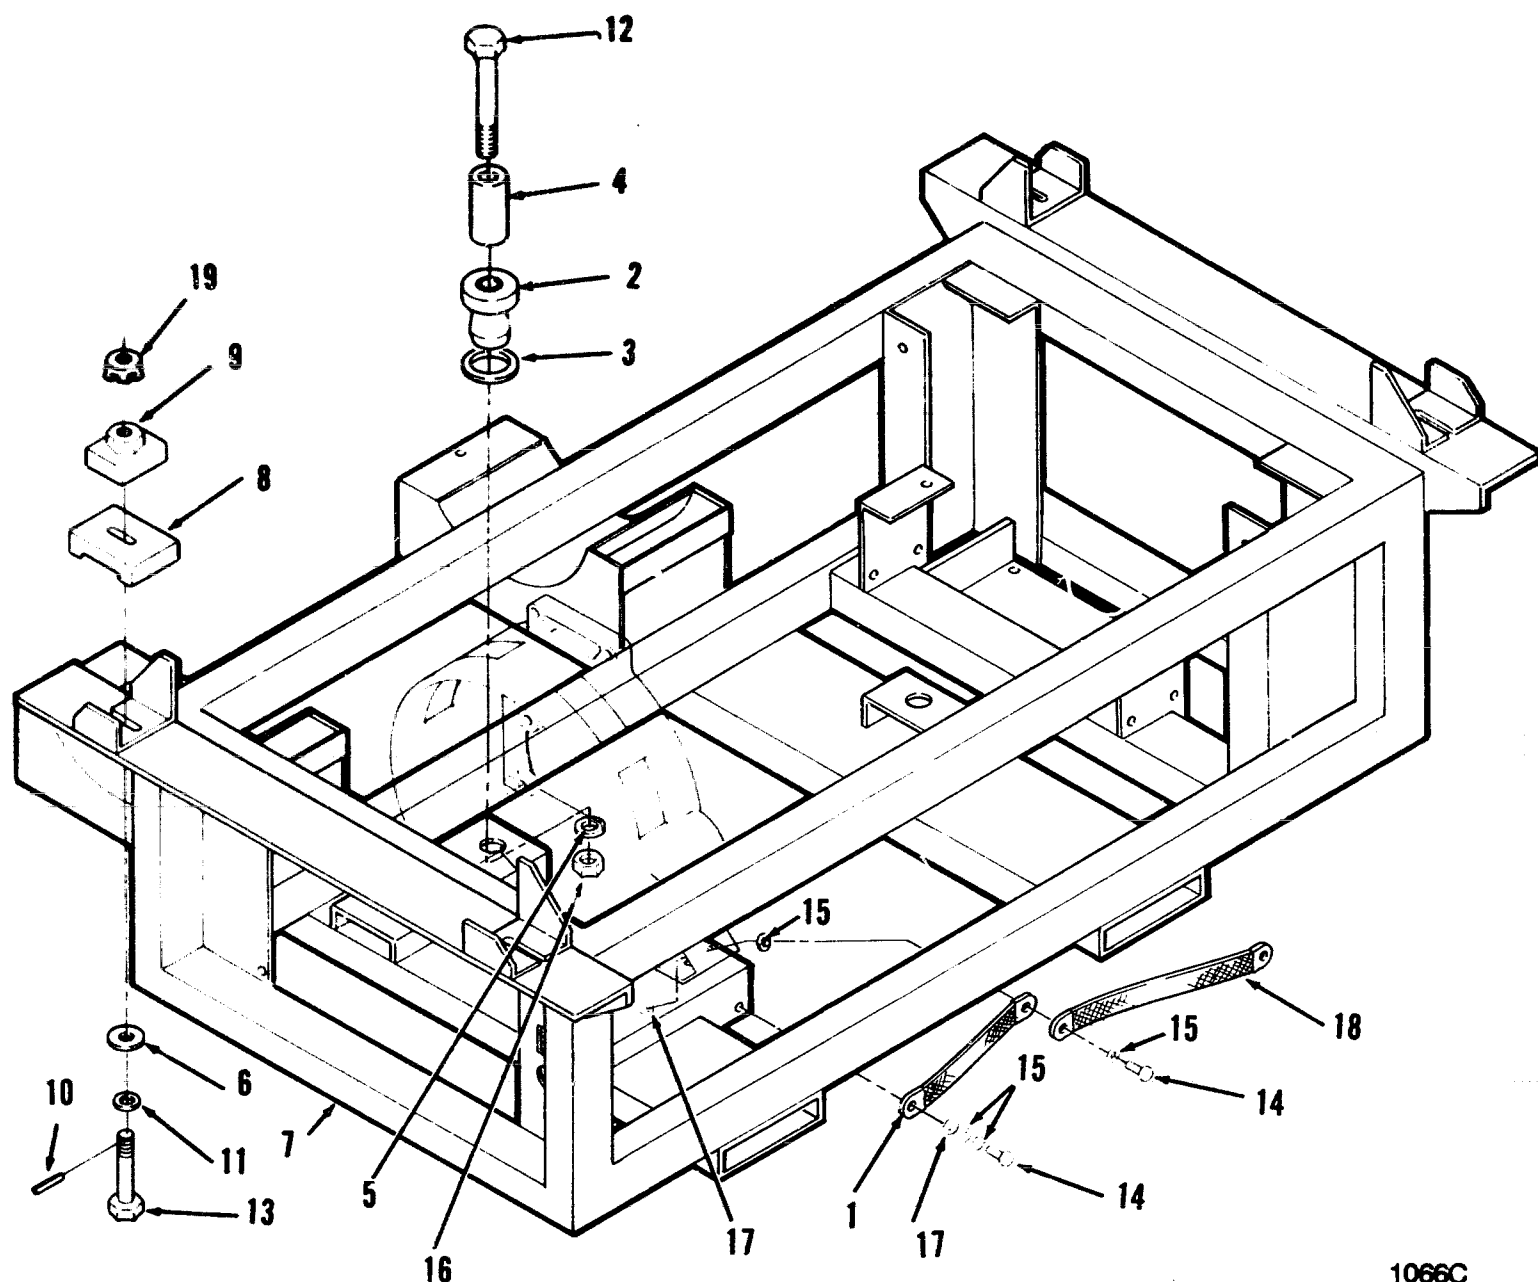

1066C

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	337-0049	1	Strap, Bond	11	526-0259-01	4	Washer
2	402-0637	3	Insulator, Vibration	12	800-0100	3	Screw, Cap - Hex Head (1/2-13 x 3.5")
3	403-3005	3	Spacer	13	800-0597	4	Screw, Cap - Hex Head
4	403-3041	3	Spacer, Mount - Engine	14	800-0730	2	Screw, Cap - Hex Head Cres
5	403-3042-01	3	Washer, Retainer	15	856-1008	4	Washer, Lock - EIT (5/16")
6	403-3042-02	4	Washer, Retainer	16	870-0490	3	Nut, Lock - HEX (1/2-13)
7	403-3308	1	Frame	17	870-0500	2	Nut, Lock (5/16")
8	403-3311-02	4	Clamp, Frame	18	337-2312	1	Strap, Bond
9	403-3312-02	4	Clamp, Frame	19	870-0505	4	Nut, Hex - Slotted
10	415-0651-19	4	Pin, Spring				

 
Housing

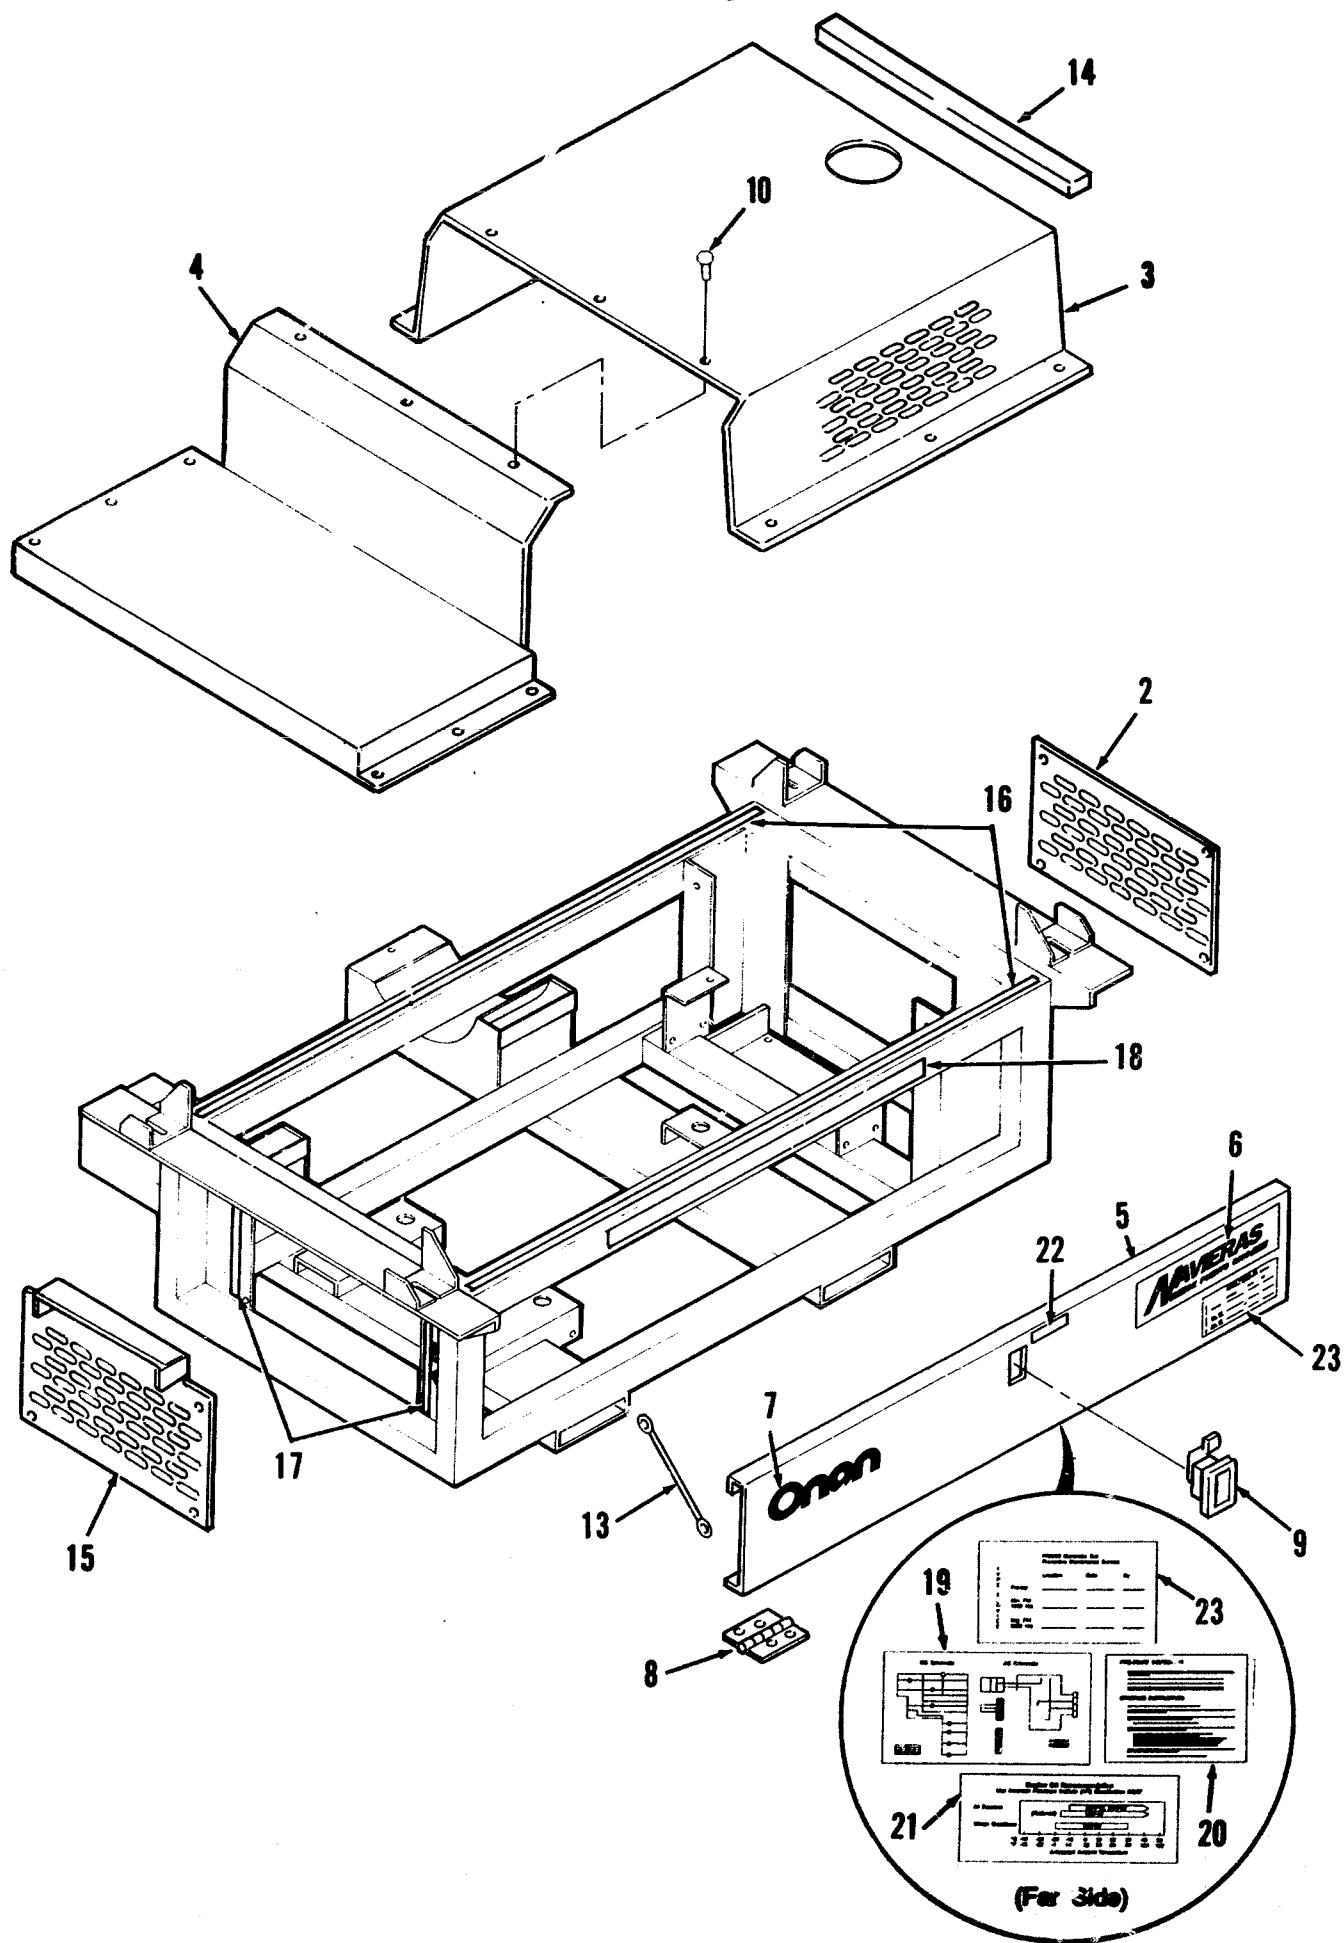

Housing

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-4557	6	Washer, Composite	13	405-4592	2	Holder, Door
2	405-4559-02	1	Housing, End	14	405-4623	1	Foam, Housing
3	405-4560-02	1	Top, Housing - Front	15	405-4620-02	1	Panel, Housing
4	405-4561-02	1	Top, Housing - Rear	16		1	Tape, Electrical (14.5 ft)
5	405-4556-02	1	Door, Housing	17		1	Tape, Electrical (5 ft)
6	098-6486	1	Decal, "Navieras"	18	895-0308	1	Tape, Polyurethane (3.3 ft)
7	098-5674-05	1	Decal, Logo - "ONAN"	19	098-6495	1	Decal, Diagram - Wiring
8	406-0729	2	Hinge, Housing	20	098-6511	1	Decal, Operating
9	406-0730	1	Latch, Housing	21	098-6510	1	Decal, Oil
10	800-0711	32	Screw, Cap - Hex Head Cres	22	098-6507	1	Decal, Latch
11	800-0712	10	Screw, Cap - Hex Head Cres	23	098-6509	1	Decal, Service
12	870-0498	7	Nut, Lock - Nylon				

 Generator

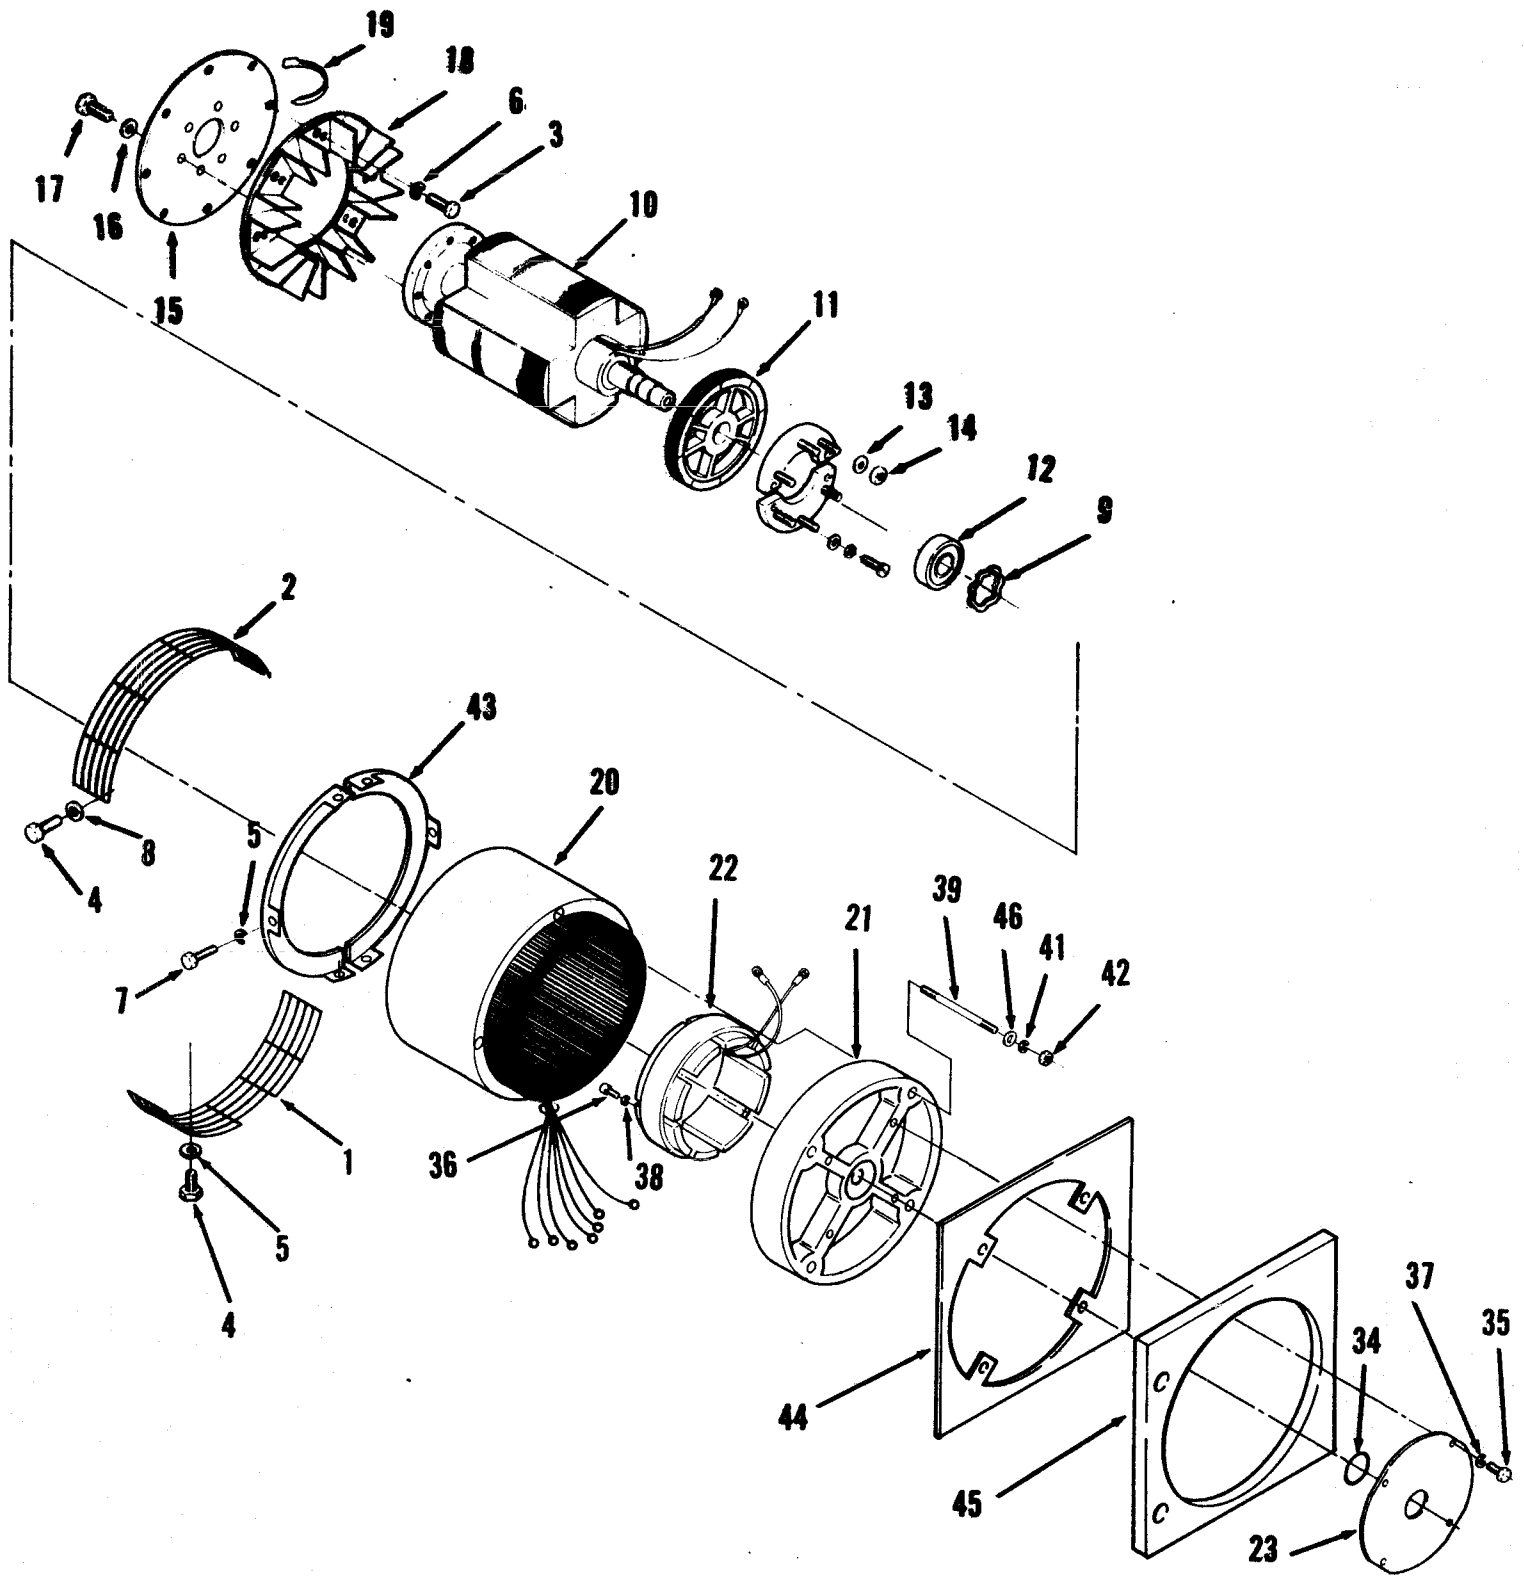


1063C

Generator

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	234-0770	1	Guard Assy, Fan - Lower	20	220-4348	1	Stator Assy, Generator
2	234-0689	1	Guard Assy, Fan - Upper	21	211-0451	1	Endbell
3	800-3017-36	8	Screw, Cap - Hex Head	22	220-4350	1	Stator, Exciter - Generator
4	800-3017-02	8	Screw, Cap - Hex Head	23	234-0927-02	1	Cover, Inlet
5	880-0114-53	6	Washer, Lock	34	509-0143	1	Seal, O-Ring
6	526-0399-62	8	Washer, Flat	35	800-0309-37	4	Screw, Machine - Hex Head (.190-24 x .50")
7	800-3017-04	6	Screw, Cap - Hex Head	36	800-0310-10	2	Screw, Cap - Hex Head (1/4-20 x 2")
8	526-0399-58	8	Washer, Flat	37	853-0040-04	4	Washer, Lock - External Tooth .19
9	232-3691	1	Washer, Bearing	38	853-0040-05	2	Washer, Lock - External Tooth .25
10	201-3492	1	Rotor Assy, Generator	39	520-0997-02	4	Stud
11	201-3494	1	Rotor, Exciter - Generator	40	800-0309-37	1	Plug, Pipe - Square Head
12	510-0173	1	Bearing, Ball	41	526-0399-19	4	Washer, Flat
13	526-0008	2	Washer, Flat (#10)	42	862-0026-07	4	Nut, Hex
14	870-0131	2	Nut, Lock - External Tooth (#10)	43	234-0688	2	Baffle Assy, Air
15	232-3693-02	1	Disc, Drive	44	405-4621-02	1	Panel, Housing
16	526-0399-25	6	Washer, Flat (1/2")	45	405-4622	1	Foam, Panel
17	800-0310-62	6	Bolt, Cap - Hex Head (1/2-13 x 3/4")	46	191-1321	3	Spacer, Bracket - Alternator
18	205-0145	1	Fan, Gen				
19	332-0941	2	Tie, Cable				

 Control

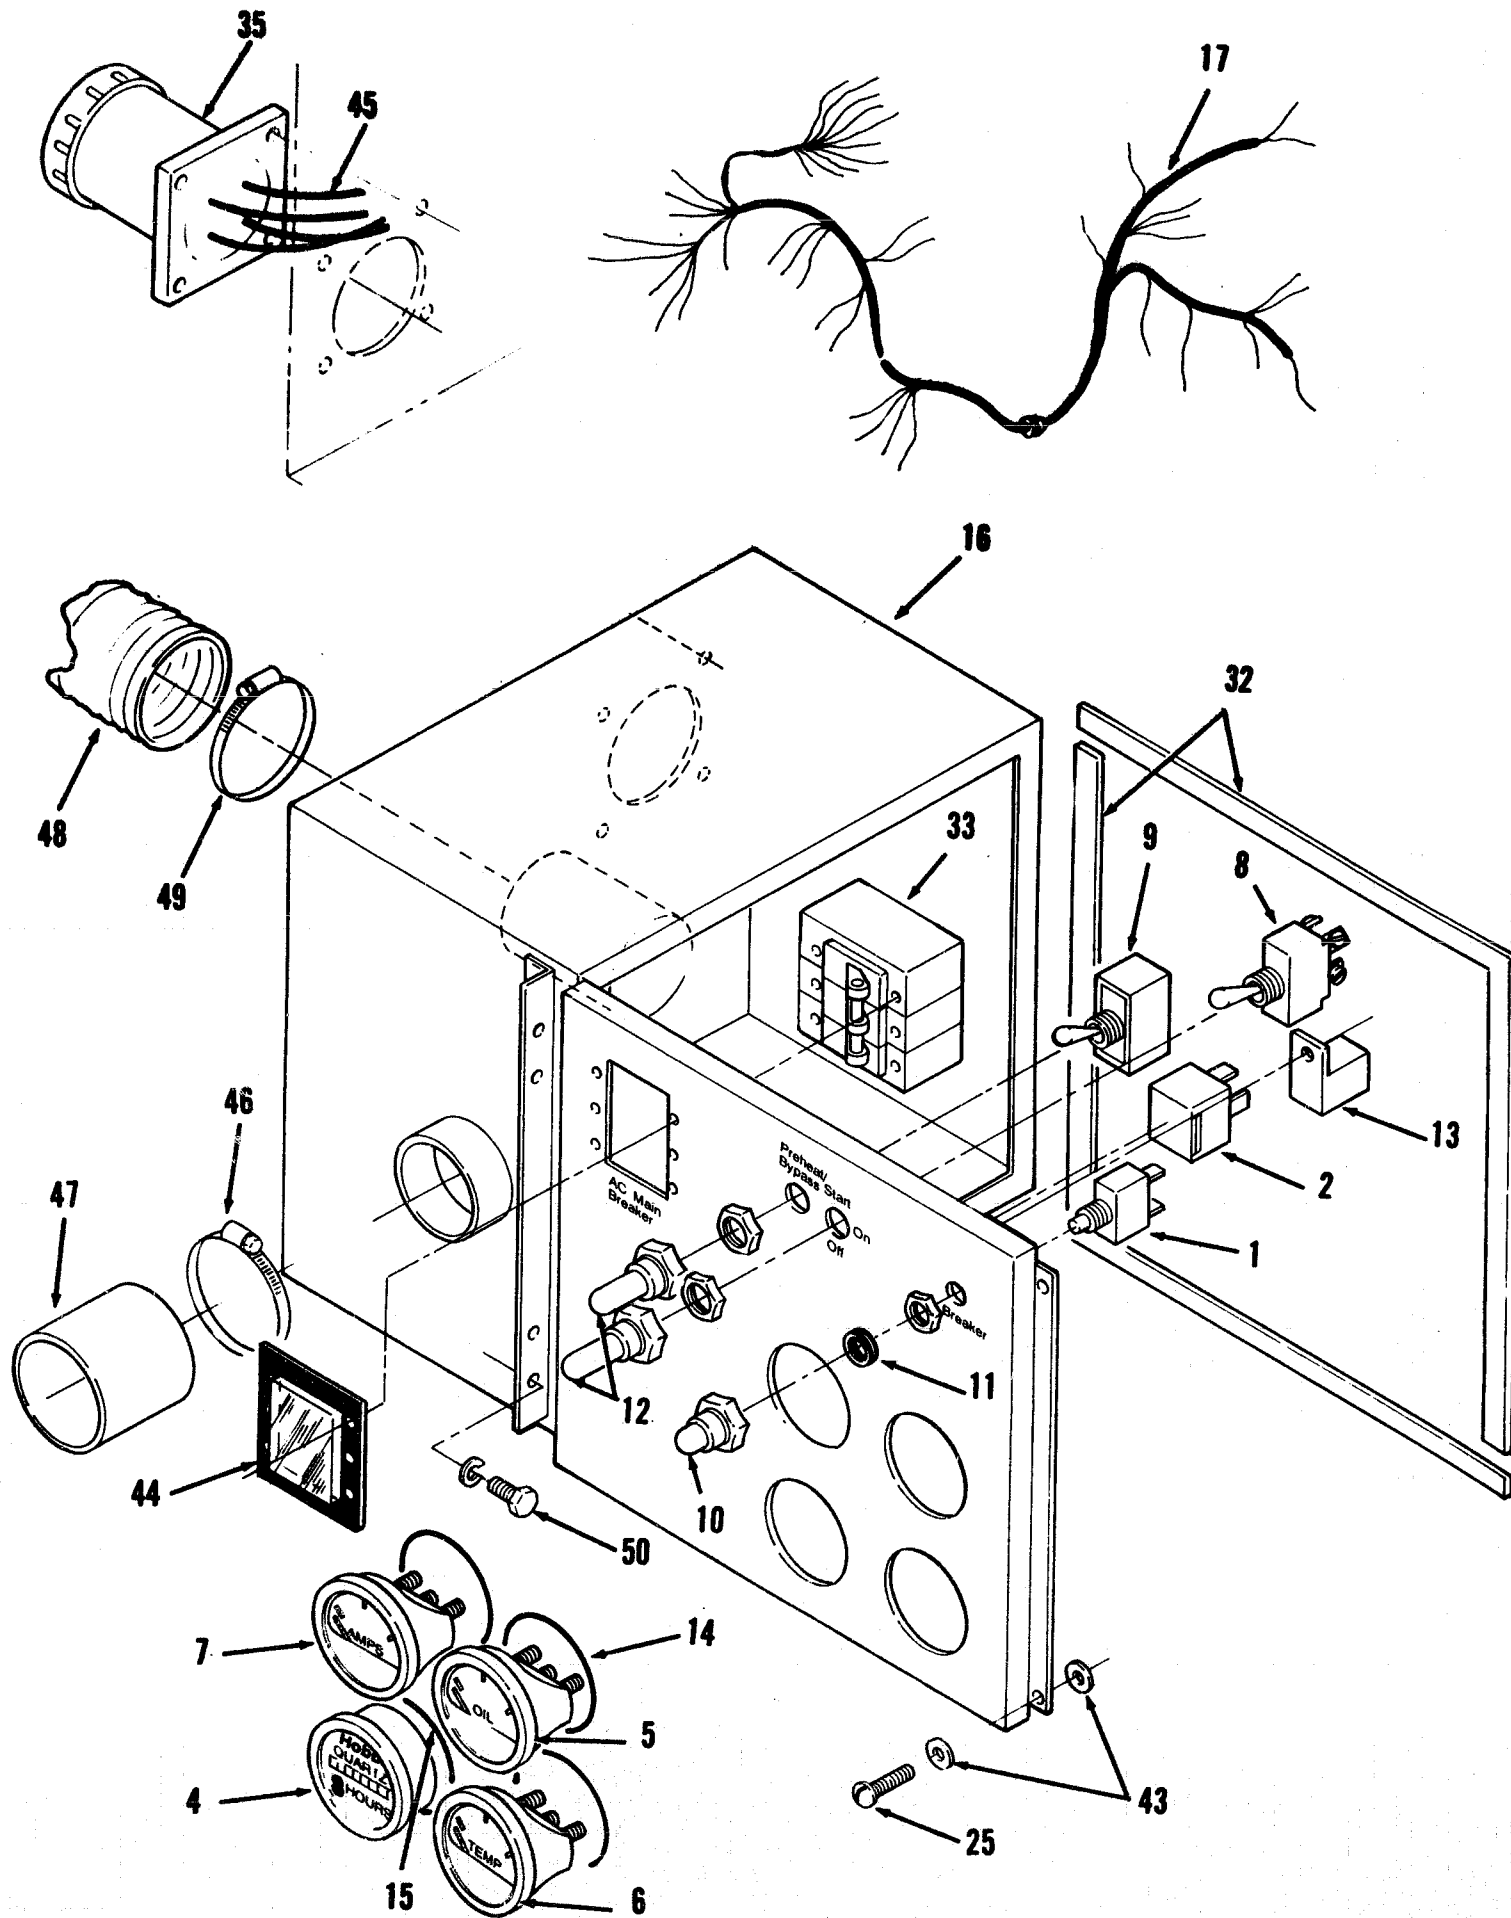


1065C

Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	320-1762	1	Breaker, Circuit - 10A (CB1)	25	812-0332	2	Screw, Round Head
2	307-2767	1	Relay, Pilot - Starter (K3)	27	870-0212	5	Nut, Lock (1/4-20)
3	307-1617	1	Relay, Solenoid (K2)	29	870-0131	2	Nut, Lock - External Tooth
4	302-1836	1	Meter, Totalizing - Time (M14)	30	868-0002	2	Nut, Jam (5/16-24)
5	193-0436	1	Gauge, Pressure - Oil (M11)	31	850-0045	2	Washer, Lock (5/16")
6	193-0437	1	Gauge, Temp - Coolant (M12)	32	128-0156	2	Gasket, Door - Control
7	302-1964	1	Meter, Amps - DC (M13)	33	320-1761	1	Breaker, Circuit - 50A (CB2)
8	308-0140	1	Switch, Off/On/Start (S11)	34	305-0696	1	Bridge, Rectifier (CR2)
9	308-0979	1	Switch, Preheat/Bypass (S12)	35	323-1564	1	Receptacle, 230V 50A (J1)
10	309-0629	1	Boot, Button - Push	36	315-0719	1	Transformer (T1)
11	309-0630	1	Adapter, Boot	37	332-3131	1	Block, Terminal - 3 Term (TB1)
12	308-0980	2	Boot, Switch - Toggle	38	305-0703	1	Suppressor Assy (RV1)
13	323-1563	1	Socket, Relay	41	870-0328	10	Nut, Lock (#10-32)
14	193-0438	3	O-Ring, Gauge	42	853-0008	2	Washer, Lock - External Tooth
15	302-1967	1	O-Ring, Hourmeter	43	405-4557	4	Washer, Composite
16	319-1428-02	1	Box, Control	44	320-1763	1	Boot, Breaker - Circuit
17	338-2789	1	Harness, Wiring - Engine	45	338-2788	1	Harness, Receptacle
18	332-1356	3	Clamp	46	503-0365	2	Clamp, Hose
19	332-0941	5	Tie, Wire	47	503-1831	1	Hose
21	098-6491	1	Decal, Face - Control Front	48	503-1835	1	Hose, Flex
22	098-6492	1	Decal, Face - Control Rear	49	503-1836	1	Clamp, Bridge
23	098-6493	1	Decal, Box - Control Bottom	50	800-0711	4	Screw, Cap - Hex Head Cres
24	098-6494	1	Decal, Box - Control Back				

 
Control

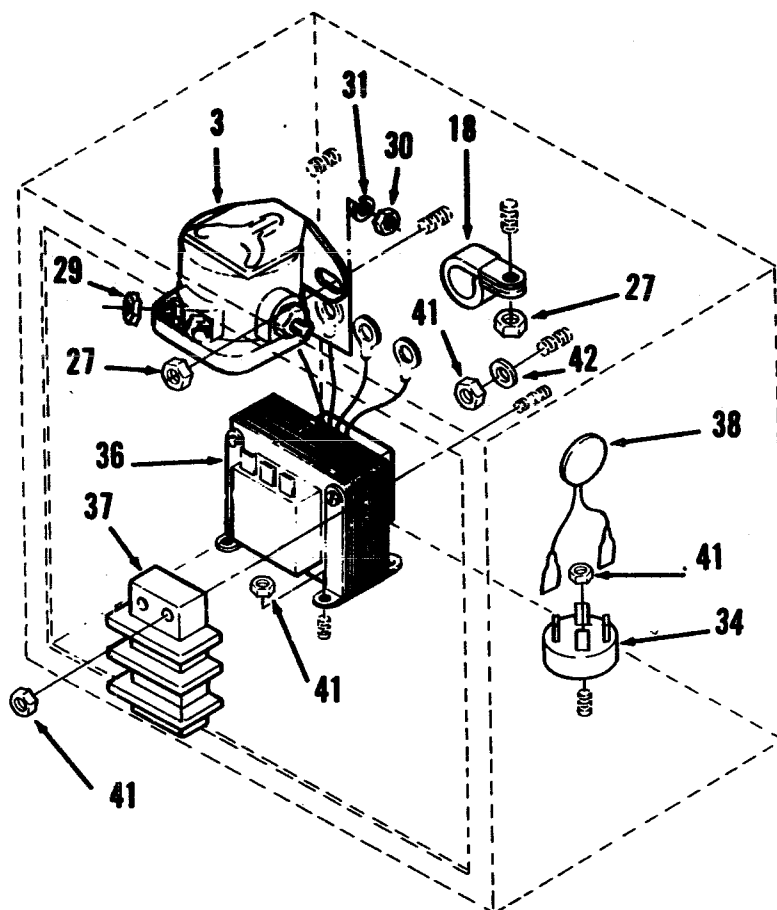

1064C

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	320-1762	1	Breaker, Circuit - 10A (CB1)	25	812-0332	2	Screw, Round Head
2	307-2767	1	Relay, Pilot - Starter (K3)	27	870-0212	5	Nut, Lock (1/4-20)
3	307-1617	1	Relay, Solenoid (K2)	29	870-0131	2	Nut, Lock - External Tooth
4	302-1836	1	Meter, Totalizing - Time (M14)	30	868-0002	2	Nut, Jam (5/16-24)
5	193-0436	1	Gauge, Pressure - Oil (M11)	31	850-0045	2	Washer, Lock (5/16")
6	193-0437	1	Gauge, Temp - Coolant (M12)	32	128-0156	2	Gasket, Door - Control
7	302-1964	1	Meter, Amps - DC (M13)	33	320-1761	1	Breaker, Circuit - 50A (CB2)
8	308-0140	1	Switch, Off/On/Start (S11)	34	305-0696	1	Bridge, Rectifier (CR2)
9	308-0979	1	Switch, Preheat/Bypass (S12)	35	323-1564	1	Receptacle, 230V 50A (J1)
10	309-0629	1	Boot, Button - Push	36	315-0719	1	Transformer (T1)
11	309-0630	1	Adapter Foot	37	332-3131	1	Block, Terminal - 3 Term (TB1)
12	308-0980	2	Boot, Switch - Toggle	38	305-0703	1	Suppressor Assy (RV1)
13	323-1563	1	Socket, Relay	41	870-0328	10	Nut, Lock (#10-32)
14	193-0438	3	O-Ring, Gauge	42	853-0008	2	Washer, Lock - External Tooth
15	302-1967	1	O-Ring, Hourmeter	43	405-4557	4	Washer, Composite
16	319-1428-02	1	Box, Control	44	320-1763	1	Boot, Breaker - Circuit
17	338-2789	1	Harness, Wiring - Engine	45	338-2788	1	Harness, Receptacle
18	332-1356	3	Clamp	46	503-0365	2	Clamp, Hose
19	332-0941	5	Tie, Wire	47	503-1831	1	Hose
21	098-6491	1	Decal, Face - Control Front	48	503-1835	1	Hose, Flex
22	098-6492	1	Decal, Face - Control Rear	49	503-1836	1	Clamp, Bridge
23	098-6493	1	Decal, Box - Control Bottom	50	800-0711	4	Screw, Cap - Hex Head Cres
24	098-6494	1	Decal, Box - Control Back				

 Parts List - Shipping

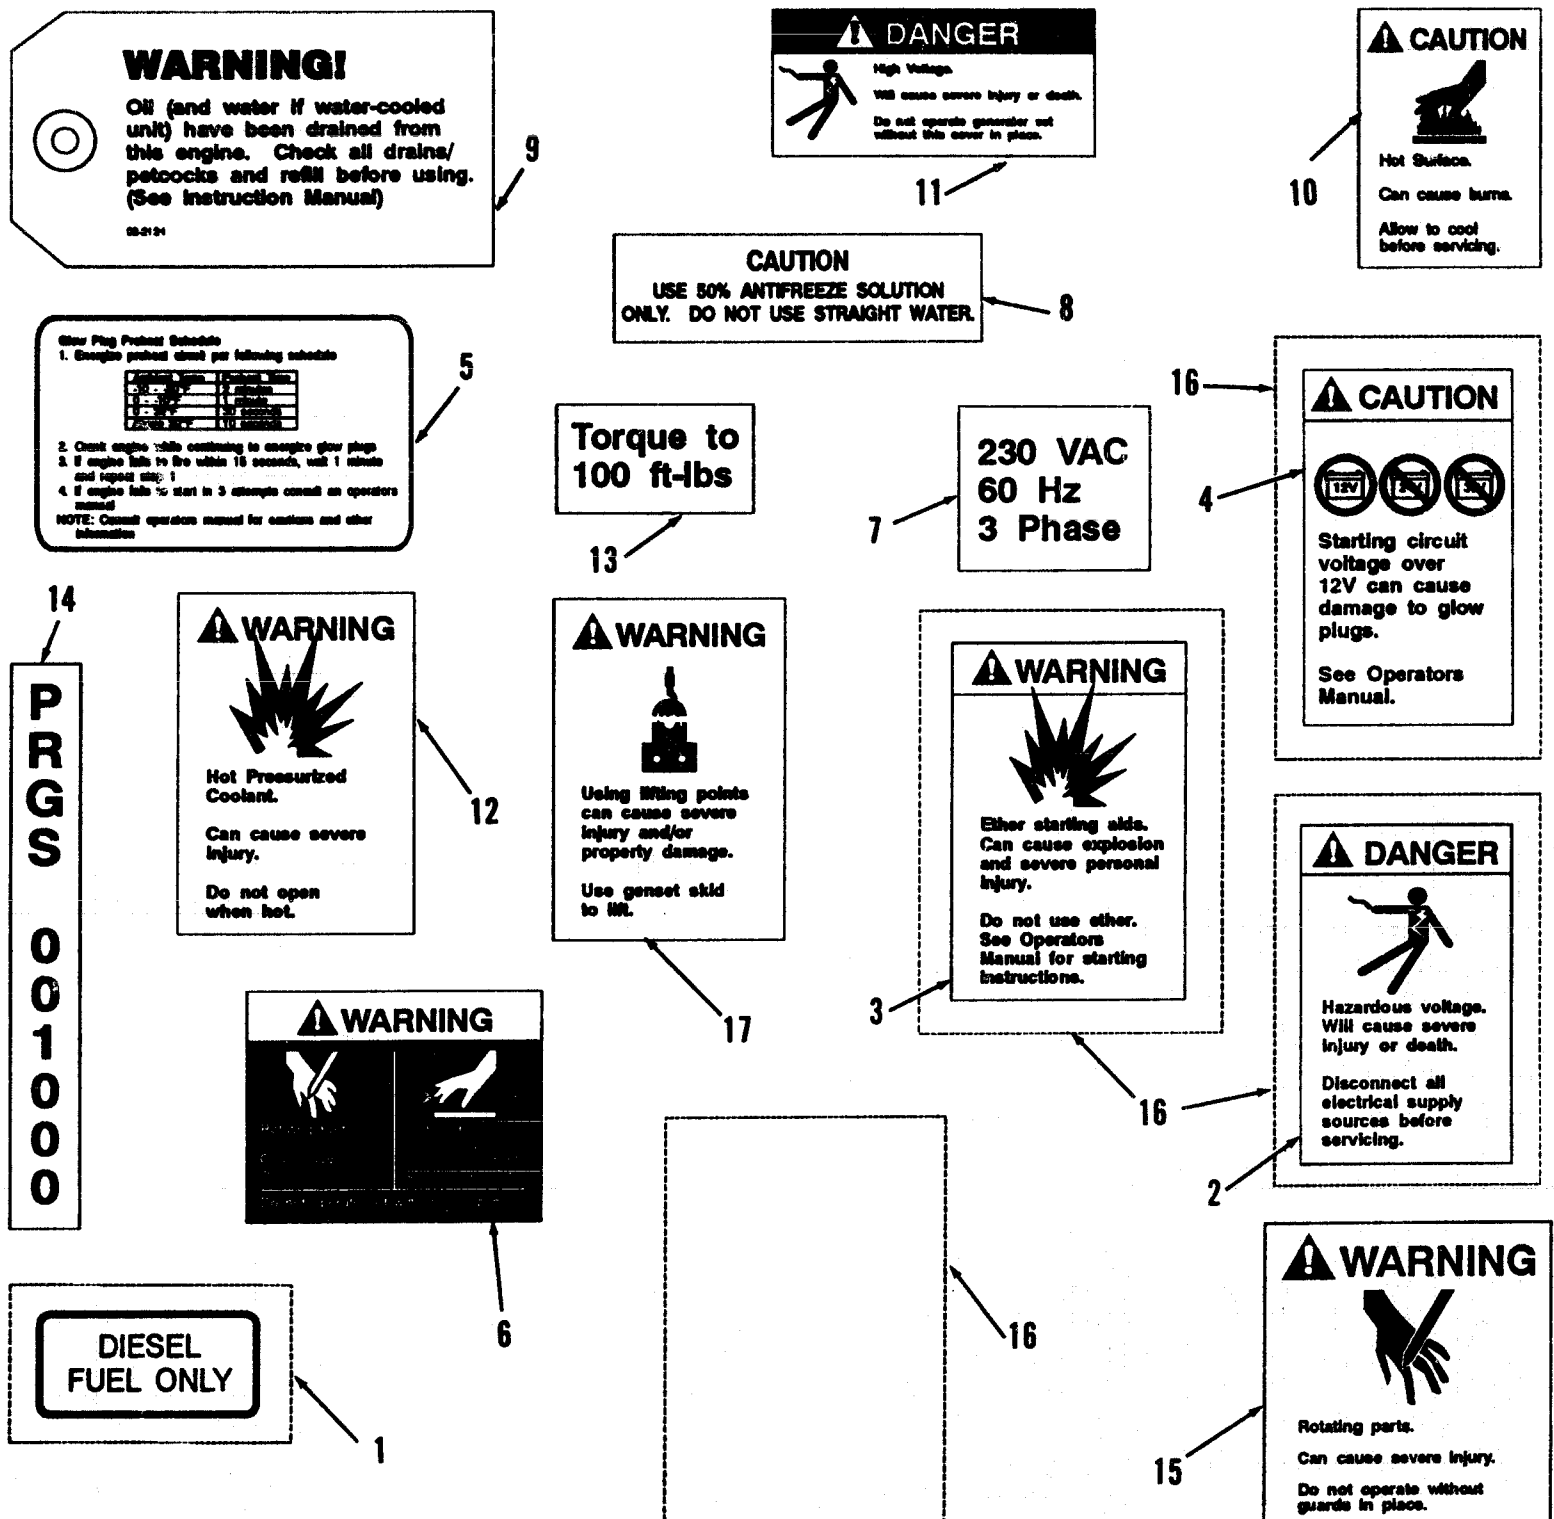

001-010

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	098-5118	1	Decal, "Diesel Fuel Only"	10	098-6195-01	2	Label, Caution
2	098-5387	1	Label, Danger	11	098-5347	1	Label, Danger
3	098-5392	1	Label, Warning	12	098-4730	1	Label, Warning
4	098-5394	1	Label, Caution	13	098-6502	4	Decal, Mounting
5	098-5964	1	Decal, "Glow Plug Preheat"	14	098-6506-01	1	Label, Number - Serial
6	098-6415	1	Label, Warning	15	098-4798	1	Label, Warning
7	098-6489	1	Decal, "230VAC 60HZ 3 Phase"	16		5	Material, Laminate
8	098-3384	1	Decal, Caution	17	098-5822	1	Label, Warning
9	098-2124	1	Tag, Warning				

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
98-4730	11	140-2705	7	307-2767	19	405-4557	7
98-5822	11	140-2709-02	7	307-2767	20	405-4557	15
98-5822	21	149-1908-01	5	308-0140	19	405-4557	19
98-6193	11	149-2349-02	5	308-0140	20	405-4557	20
098-2124	21	155-2515	8	308-0979	19	405-4559-02	15
098-3384	21	155-2548	8	308-0979	20	405-4560-02	15
098-4730	21	155-2632	8	308-0980	19	405-4561-02	15
098-4798	21	155-2633-02	8	308-0980	20	405-4592	15
098-5118	21	155-2634	8	309-0561-02	5	405-4620-02	15
098-5347	21	159-1312	9	309-0628	5	405-4621-02	17
098-5387	21	159-1313-02	9	309-0629	19	405-4622	17
098-5392	21	159-1314	9	309-0629	20	405-4623	15
098-5394	21	159-1315	9	309-0630	19	406-0729	15
098-5674-05	15	191-1321	6	309-0630	20	406-0730	15
098-5964	21	191-1321	17	315-0719	19	416-0919	5
098-6195-01	21	191-1981	6	315-0719	20	416-0979	5
098-6415	21	191-1983-01	6	319-1428-02	19	416-0980	5
098-6486	15	191-2035	6	319-1428-02	20	416-0981	5
098-6489	21	193-0244	5	320-1761	19	416-0982	5
098-6491	19	193-0318	5	320-1761	20	501-0605	5
098-6491	20	193-0436	19	320-1762	19	501-0606	5
098-6492	19	193-0436	20	320-1762	20	501-0607	5
098-6492	20	193-0437	19	320-1763	19	502-0020	11
098-6493	19	193-0437	20	320-1763	20	502-0029	5
098-6493	20	193-0438	19	323-1563	19	502-0029	11
098-6494	19	193-0438	20	323-1563	20	502-0582	11
098-6494	20	201-3492	17	323-1564	19	502-1043-02	5
098-6495	15	201-3494	17	323-1564	20	502-1043-03	5
098-6502	21	205-0145	17	332-0941	17	502-1043-03	9
098-6506-01	21	211-0451	17	332-0941	19	502-1045-12	5
098-6507	15	220-4348	17	332-0941	20	502-1103	5
098-6509	15	220-4350	17	332-1356	19	502-1103	11
098-6510	15	232-3691	17	332-1356	20	502-1118	5
098-6511	15	232-3693-02	17	332-3131	19	503-0276	5
128-0156	19	234-0688	17	332-3131	20	503-0276	11
128-0156	20	234-0689	17	337-0049	13	503-0354	7
130-1880	11	234-0770	17	337-2312	13	503-0365	7
130-3721	11	234-0927-02	17	338-2788	19	503-0365	11
130-4036	11	302-1836	19	338-2788	20	503-0365	19
130-4037-02	11	302-1836	20	338-2789	19	503-0365	20
130-4038-02	11	302-1964	19	338-2789	20	503-0419	7
130-4039-02	11	302-1964	20	402-0637	13	503-0429	11
130-4040-02	11	302-1967	19	403-3005	13	503-0685	11
130-4041	11	302-1967	20	403-3041	13	503-1827	11
130-4042	11	305-0696	19	403-3042-01	13	503-1828	11
130-4044-02	9	305-0696	20	403-3042-02	13	503-1831	19
130-4044-02	11	305-0703	19	403-3308	13	503-1831	20
140-0519	7	305-0703	20	403-3311-02	13	503-1834	7
140-1559	7	307-1617	19	403-3312-02	13	503-1835	19
140-2703	7	307-1617	20	405-4556-02	15	503-1835	20

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
503-1836	19	800-2057	5	870-0500	8		
503-1836	20	800-3014	6	870-0500	13		
503-1837	11	800-3015	11	870-2161	6		
505-0049-01	5	800-3016	5	870-2161	6		
508-0051	11	800-3016	8	870-2161	6		
508-0060	11	800-3017-02	17	870-2161	6		
508-0183	11	800-3017-04	17	870-2161	6		
508-1057	7	800-3017-36	17	870-2161	6		
509-0143	17	800-6100	6	870-2161	6		
510-0173	17	812-0331	7	870-2161	6		
511-0147-14	6	812-0332	19	870-2161	6		
516-0244	13	812-0332	20	870-2161	6		
518-0625	5	850-0045	19	870-2161	6		
518-0625	11	850-0045	20	870-2161	6		
520-0997-02	17	850-0114-54	17	870-2161	6		
526-0008	17	850-2005	6	870-2161	6		
526-0022	11	850-2008	6	870-2161	6		
526-0191	5	850-2010	6	870-2161	6		
526-0191	8	851-0039	6	870-2161	6		
526-0259-01	13	853-0008	19	870-2161	6		
526-0395	9	853-0008	20	870-2161	6		
526-0395	11	853-0040-04	17	870-2161	6		
526-0396	5	853-0040-05	17	870-2161	6		
526-0396	11	854-0014	7	870-2161	6		
526-0399-19	17	856-0006	7	870-2161	6		
526-0399-25	17	856-0013	5	870-2161	6		
526-0399-58	17	856-1008	5	870-2161	6		
526-0399-62	17	856-1008	13	870-2161	6		
526-1516	6	860-2006	6	870-2161	6		
526-2106	6	860-2008	6	870-2161	6		
718-1054	8	860-2059	6	870-2161	6		
740-1008	8	862-0026-07	17	870-2161	6		
800-0100	13	868-0002	19	870-2161	6		
800-0309-37	17	868-0002	20	870-2161	6		
800-0310-10	17	870-0065	7	870-2161	6		
800-0310-62	17	870-0131	17	870-2161	6		
800-0597	13	870-0131	19	870-2161	6		
800-0711	7	870-0131	20	870-2161	6		
800-0711	15	870-0212	7	870-2161	6		
800-0711	19	870-0212	19	870-2161	6		
800-0711	20	870-0212	20	870-2161	6		
800-0712	7	870-0328	19	870-2161	6		
800-0712	11	870-0328	20	870-2161	6		
800-0712	15	870-0490	13	870-2161	6		
800-0717	11	870-0498	5	870-2161	6		
800-0728	8	870-0498	7	870-2161	6		
800-0730	5	870-0498	15	870-2161	6		
800-0730	13	870-0499	9	870-2161	6		
800-0743	9	870-0499	11	870-2161	6		
800-0743	11	870-0500	5	870-2161	6		